

How to connect a *Dish 500+* or *Dish 1000+* to the receiver.

(Download)

you can connect a Dish 500+ or dish 1000+ to up to 4 receivers using a DP34 or DP44 Switch.


you can also connect the it to one Receiver using a 4x1 DiSEqC switch

connect the 119 LNB to port 1 on the switch.

connect the 110 LNB to port 2 on the switch

connect the 118.7 LNB to port 3 on the switch

if you have a dish 1000+ you can connect the 129 LNB to port 4 on the switch.

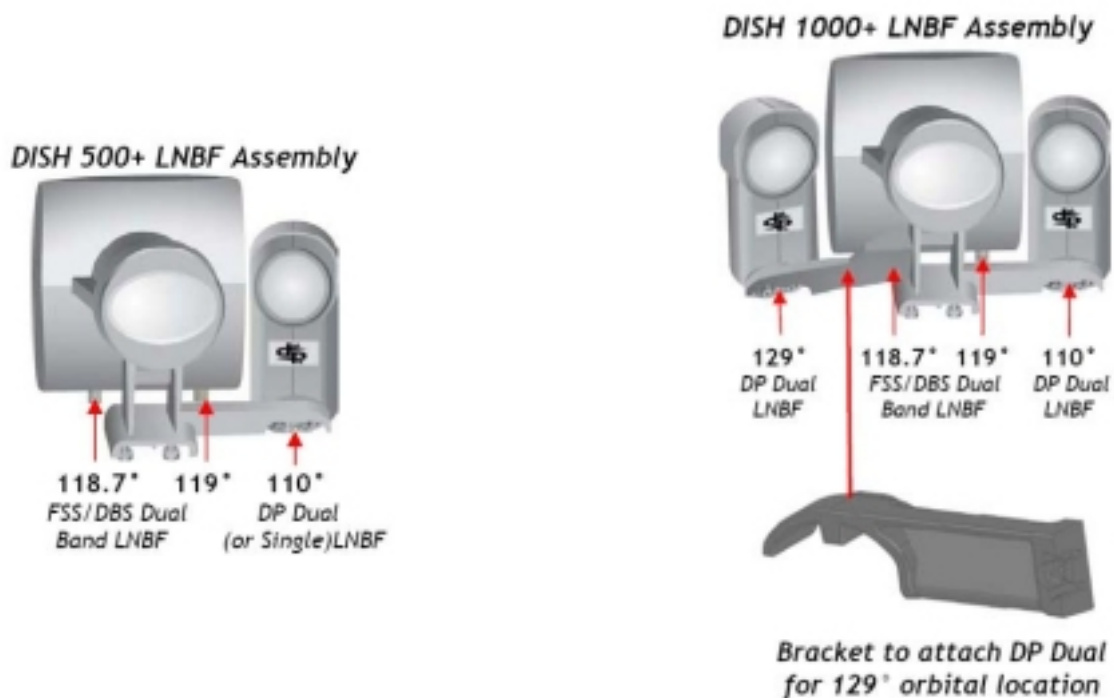

Press **MENU** On the remote control then go to **Installation** > **Antenna Setting** and press **OK**

this is what the Antenna Setting screen looks like.

using the right or left button on the remote you can open the list of satellite names and select the one you want to set.

when pointing your dish and locking on signal the satellite name will appear on the top right screen



below is the satellite settings. if you are using a dish 500+ then skip satellite 129

Satellite	Echo 7 119	Echo8/10 110	AMC 16 118.7	echo 5 129
legacy sw	None	None	None	None
DiSEqC	Port 1	Port 2	Port 3	Port 4
LNB Type	OCS-DP	OCS-DP	Normal	OCS-DP
LNB LO	11250	11250	10750	11250
22 KHz	22 KHz off	22 KHz off	22 KHz off	22 KHz off

After setting the satellites press **Exit** then **OK** to save your settings. then go to **Channel Search** on the menu and press **OK** select **All Satellites Search** and press **OK**

On the scan screen

Set **Switch type** to **DiSEqC 4 Port**

Set **Search type** to **FTA + scramble**

Set **Network Search** to **Enable**

Set **A ENTRY** to **Echostar 7 119.0 W**

Set **B ENTRY** to **Echostar 8/10 110.0 W**

Set **C ENTRY** to **AMC 16 118.7 W**

keep **D ENTRY** on **Skip** if using a dish 500+ or change it to **EchoStar 5 129.0 W** if you are using a dish 1000+

press **OK to start the scan. after the scan is complete press **OK** to save the channels**

Now press EXIT on the remote few times to exit out of the menu.

let the Keys role for few minutes and enjoy.
